


## MOISSANITE TESTER MODEL-MT2

**MT2 MOISSANITE TERMINATOR IS USED TO IDENTIFY ARTIFICIAL MOISSANITE GEM STONES AND OTHER MAN MADE SYNTHETIC GEMSTONES. TO IDENTIFY MOISSANITE GEMSTONES AND OTHER MAN MADE SIMULANTS AND ALSO THE "FOREVER ONE" MOISSANITE SOME FURTHER TESTING MAYBE REQUIRED SUCH AS UV LIGHT E.T.C.**

### MOISSANITE TESTING INSTRUCTIONS

1. SET THE ADJUSTMENT KNOB TO THE RIGHT (LARGE STONE SETTING #3).
2. REMOVE PROTECTIVE END CAP (#1).
3. WITH YOUR THUMB, PRESS THE "PRESS AND HOLD" (#6) WHILE YOUR FINGERS TOUCH THE REAR METAL PLATE.
4. THE YELLOW TESTING LIGHT (#4) SHOULD ILLUMINATE AND MUST STAY ON THROUGHOUT ALL TESTING.
5. WITH YOUR OTHER HAND, HOLD THE METAL PART OF THE RING OR ANY SOLID METAL PART CONTAINING THE GEM STONE. WHEN USING THE LOOSE STONE HOLDER YOUR OTHER HAND MUST HOLD THE LOOSE STONE HOLDER.
6. PLACE THE TESTER PROBE IN THE CENTER OF THE GEMSTONE TO BE TESTED WITHOUT TOUCHING THE TESTER PROBE TO ANY METAL SURFACE. DO THIS IN A MANNER THAT THE METAL PART OF THE TESTING PROBE IS A FAR AWAY AS POSSIBLE FROM ANY METAL FINDINGS OR GEM HOLDING DEVICE. BECAUSE MOISSANITE GEM STONES ARE INCONSISTENT, FOR BEST RESULTS BE SURE TO TOUCH 3 OR 4 POINTS AROUND THE CENTER OF THE GEMSTONE.
7. IF A MOISSANITE GEMSTONE IS BEING TESTED, YOU WILL HEAR A DISCONTINUOUS BEEP AND SEE A FLASHING GREEN LIGHT (#2).
8. REAL GEMSTONES WILL NOT INDICATE WHEN USING THE MT2 TESTER. IN ORDER TO IDENTIFY NATURAL DIAMONDS, A THERMAL DIAMOND TESTER SUCH AS THE R S MIZAR "PRESTIGE SERIES II" MUST BE USED.
9. USE THE SMALL STONE SETTING ONLY WHEN TESTING SMALL STONES, APPROXIMATELY 3.5 MM OR SMALLER, OR WHEN YOU CANNOT KEEP THE PROBE A TENTH OF AN INCH FROM THE METAL PRONGS OR SURFACE.

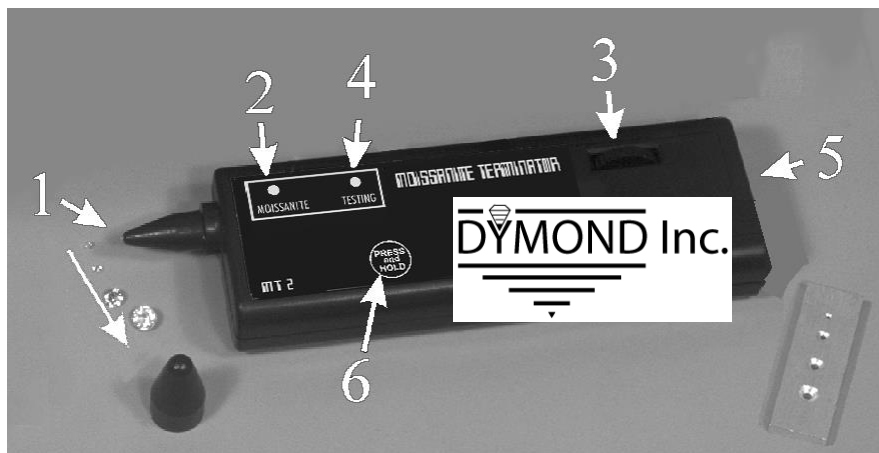

1. PROBE AND PROBE COVER	3. ADJUSTMENT KNOB	5. BATTERY COMPARTMENT/ COVER
2. MOISSANITE INDICATOR	4. TESTING/ BATTERY OK INDICATOR	6. TEST BUTTON

**NOTE: TO TEST UNMOUNTED STONES PLACE THE STONE IN LOOSE STONE HOLDER.  
ALWAYS HOLD THE LOOSE STONE HOLDER WITH YOUR FREE HAND.**

**HELPFUL HINTS:**

- ALWAYS MAKE SURE THAT THE GEMSTONE TO BE TESTED IS CLEAN AND DRY.
- THE ONLY ERROR THAT CAN BE MADE IS GETTING TOO CLOSE TO THE METAL SURFACE. WHEN THIS HAPPENS, A SMALL BLUE GLOW CAN USUALLY BE OBSERVED FROM THE PROBE TO THE METAL. IF THIS HAPPENS, A MOISSANITE INDICATION WILL BE SEEN AND HEARD. KEEP THE PROBE AWAY FROM THE METAL SURFACES.
- IT IS BEST TO TEST IN A CIRCULAR MOTION AROUND THE CENTER OF THE GEMSTONE. SEVERAL POINTS ON THE STONE SHOULD ALWAYS BE CHECKED.
- THE YELLOW TESTING LIGHT MUST REMAIN ON DURING ALL TESTING. IF IT DOESN'T THE BATTERY NEEDS TO BE REPLACED. USE A NON-RECHARGABLE 9 VOLT ALKALINE BATTERY.
- TO IDENTIFY MOISSANITE GEMSTONES AND OTHER MAN MADE SIMULANTS AND ALSO THE "FOREVER ONE" MOISSANITE SOME FURTHER TESTING MAYBE REQUIRED SUCH AS UV LIGHT E.T.C.
- NO INDICATION WILL BE SEEN OR HEARD WHEN USING THE "MT-2" TESTER ON ANY NATURAL GEMSTONES.
- A FUNCTION TEST CAN BE DONE BY SIMPLY TOUCHING YOUR FREE HAND TO THE TESTER PROBE. MOISSANITE WILL BE INDICATED.

**WARRANTY**

Dymond, Inc. PROVIDES THAT EACH MOISSANITE TESTER WILL BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE (BATTERY NOT INCLUDED IN WARRANTY). THIS WARRANTY WILL BECOME VOID BY:

- UNAUTHORIZED REPAIR, MISUSE, MODIFICATION, OR ALTERATION
- ACCIDENTAL DAMAGE, NEGLIGENCE OR IMPROPER USE.

Dymond, Inc. SHALL NOT BE HELD LEGALLY LIABLE OR RESPONSIBLE FOR ANY ERROR IN DISPLAY INDICATION OR INTERPRETATION THEREOF IN THE IDENTIFICATION OF ANY STONES, MINERALS, GEMS, OR GEMSTONES BY THE MOISSANITE TESTER.

**WARRANTY SERVICE**

SHOULD THIS TESTER REQUIRE WARRANTY SERVICE, YOU MUST CALL OR WRITE Dymond Inc FOR A RETURN MATERIAL AUTHORIZATION [R.M.A.] BEFORE RETURNING IT FOR REPAIR. ALL RETURNS MUST BE ACCOMPANIED BY A COPY OF THE ORIGINAL SALES RECEIPT. ANY RETURNS WITHOUT THE R.M.A. NUMBER ON THE OUTSIDE OF THE PACKAGE WILL NOT BE ACCEPTED AND WILL BE RETURNED TO SENDER.